

# GSM Remote I/O Kit

## What is the Operating voltage of GSM Remote I/O Kit?

It needs +5V 2Amp power supply to work.

Bandspeed Adaptor (5V 2.6A): [http://www.e-gizmo.net/oc/index.php?route=product/product&product\\_id=46621](http://www.e-gizmo.net/oc/index.php?route=product/product&product_id=46621)

Unique solution ID: #1099

Author: Administrator

Last update: 2018-04-21 07:47