

# Multi-voltage level converter

## Where can i put a 5V and 3.3V output in Multi-voltage level converter? In Vref\_A and Vref\_B.

Vref\_B = 5V (Reference B) is always greater than in Vref\_A = 3.3V (Reference A).

Unique solution ID: #1120

Author: Administrator

Last update: 2018-04-21 10:10